 
 
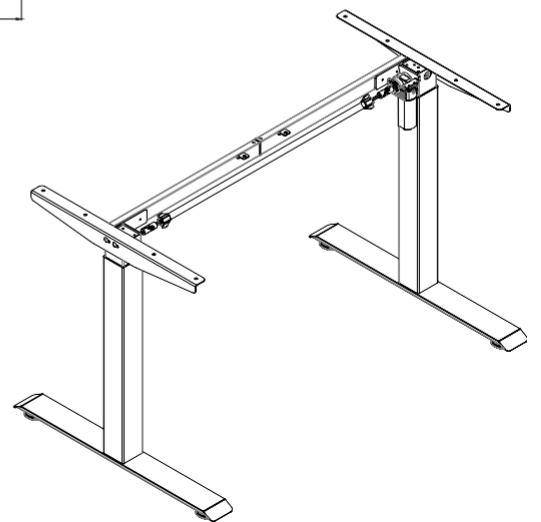 
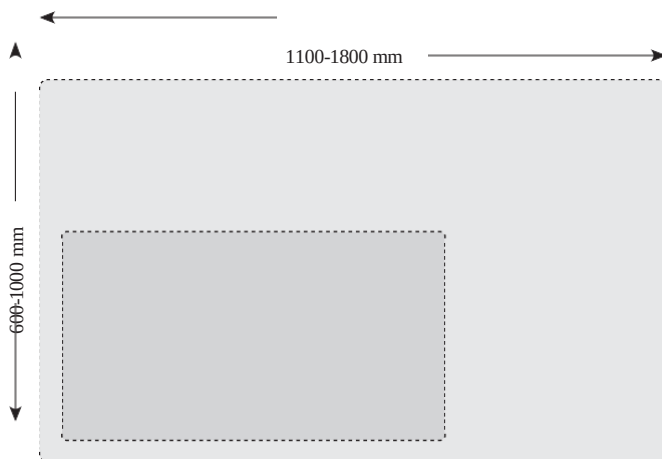 
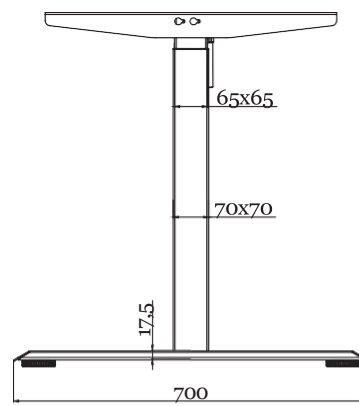 



















# Ергономична регулируема основа за бюро

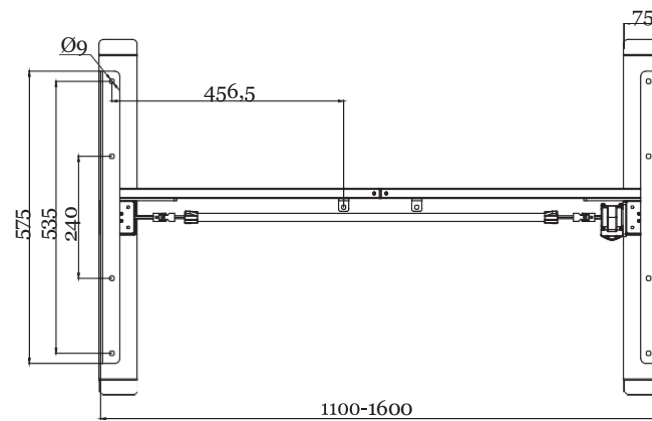


## Инструкция за монтаж

                 ---

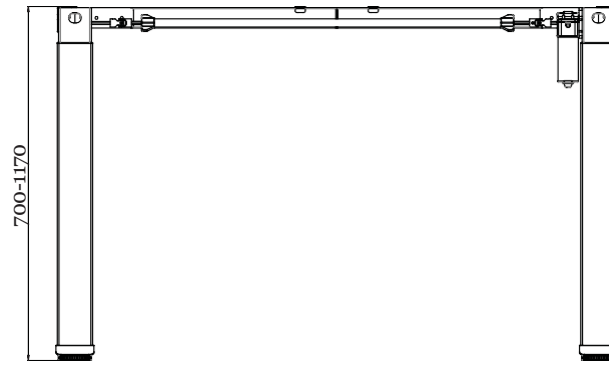


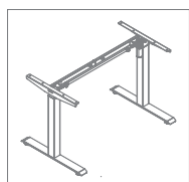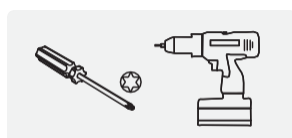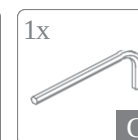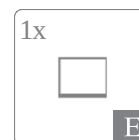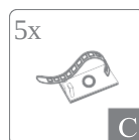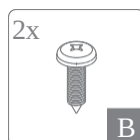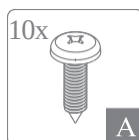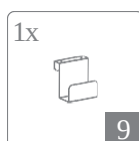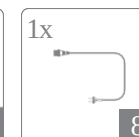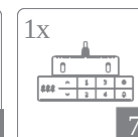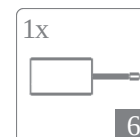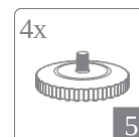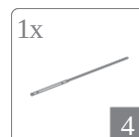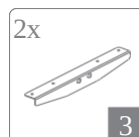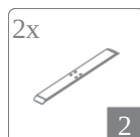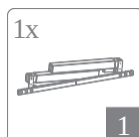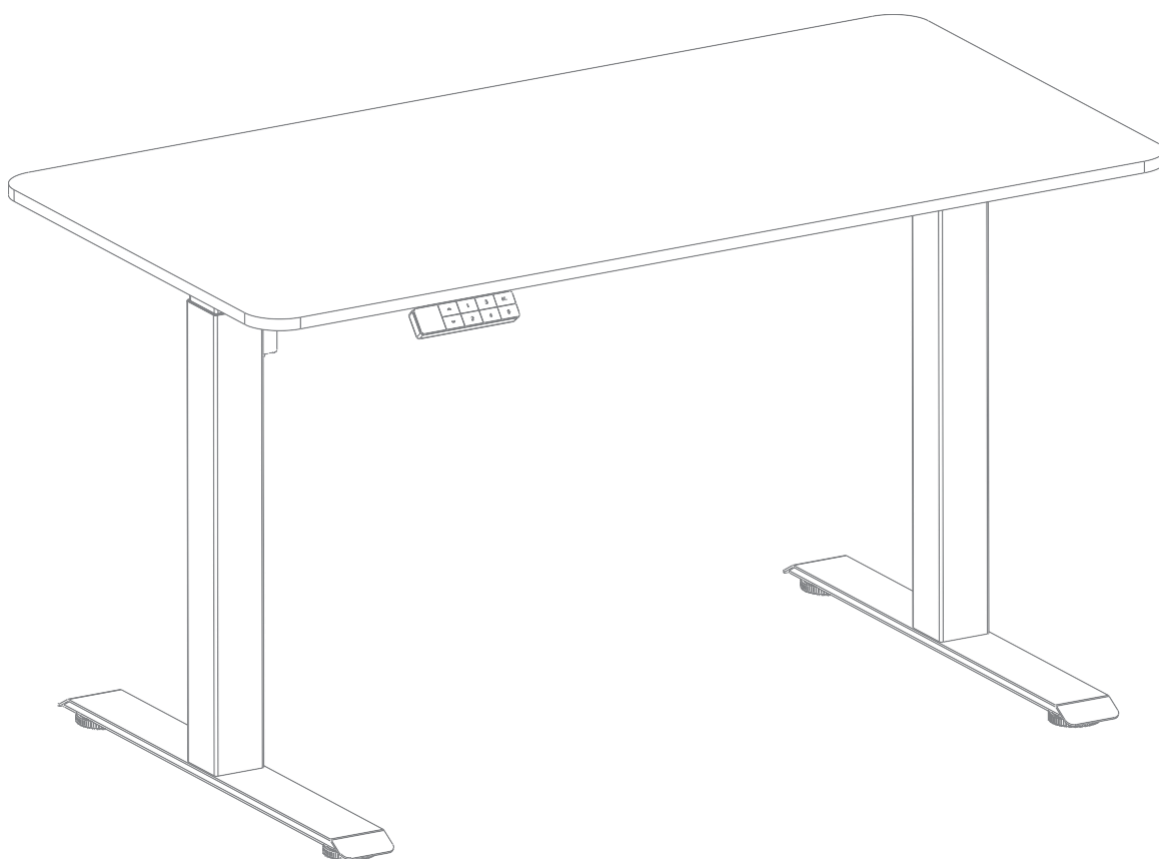




1

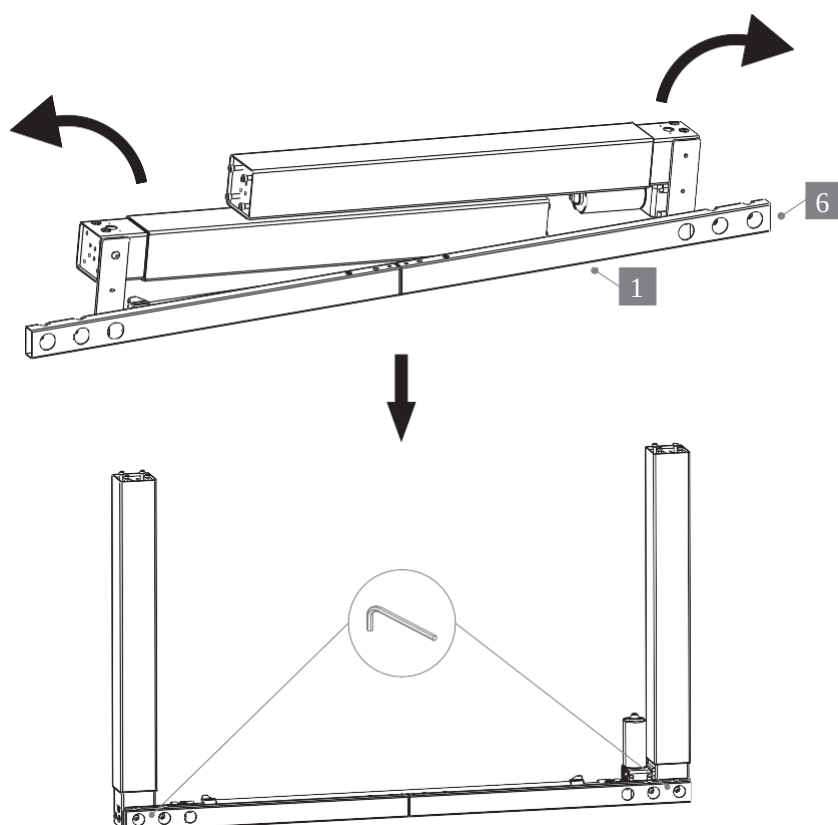 




2

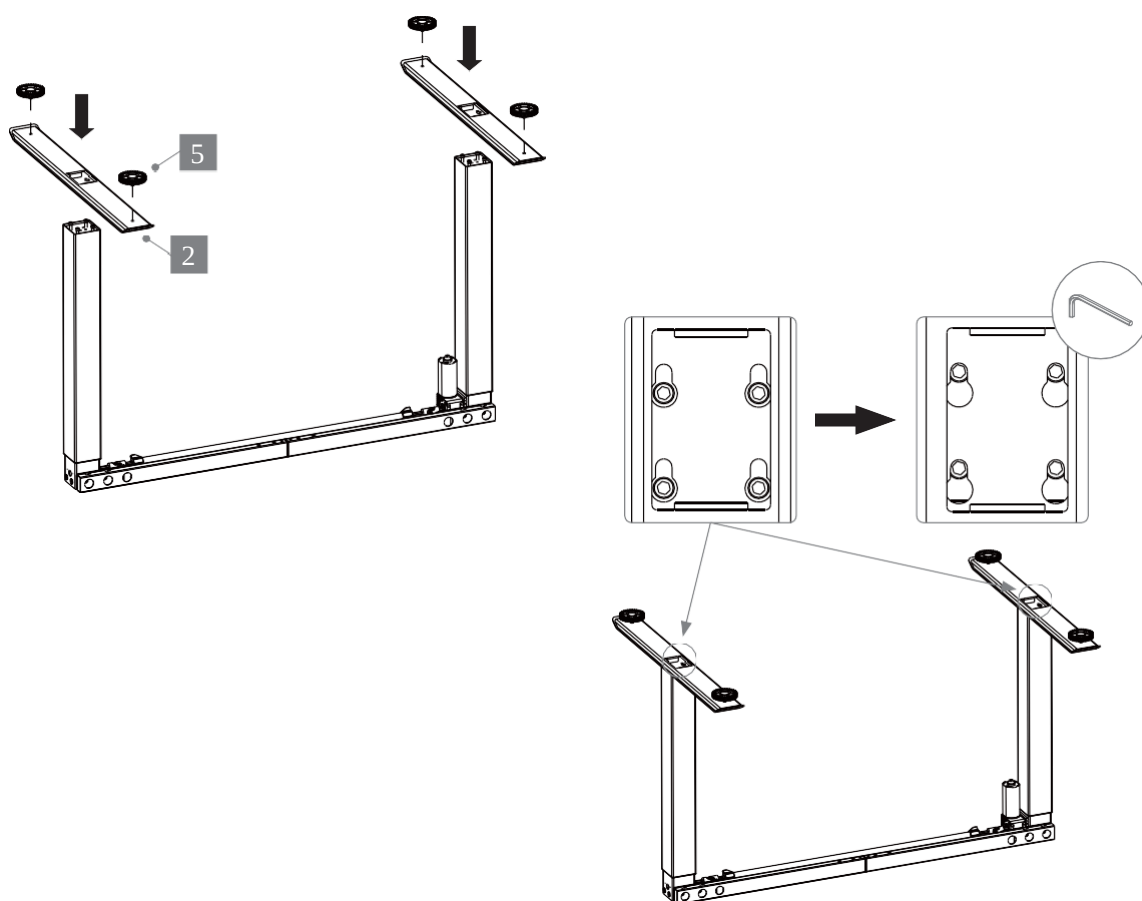 




3

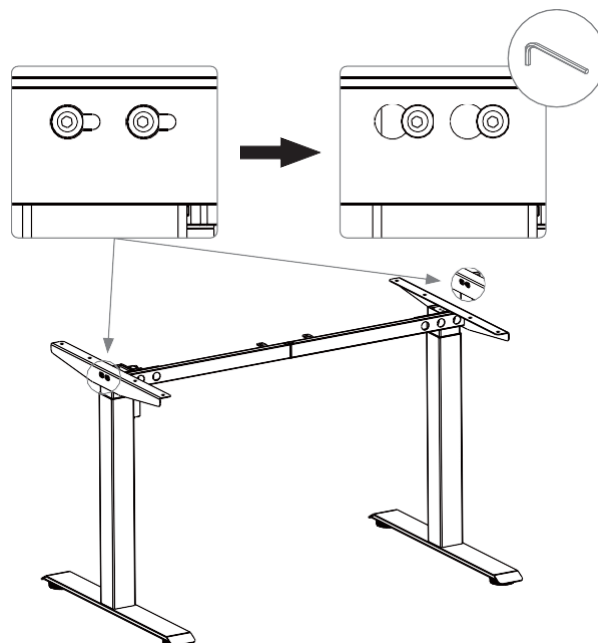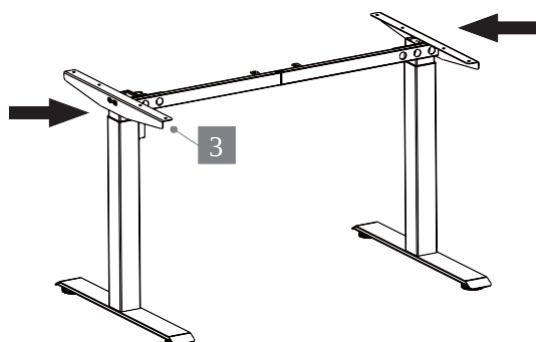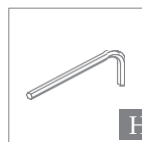   



4

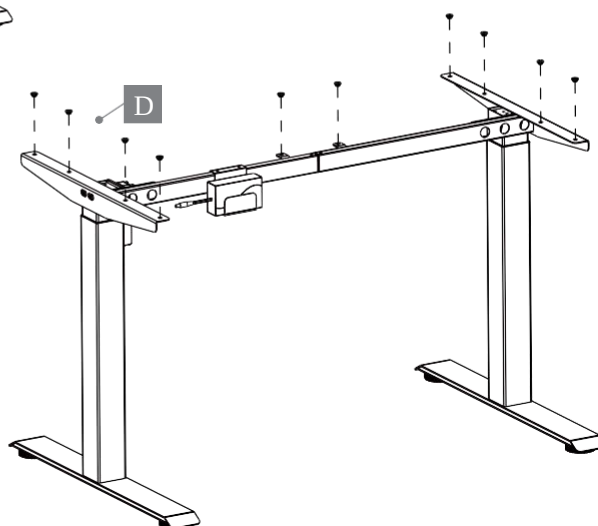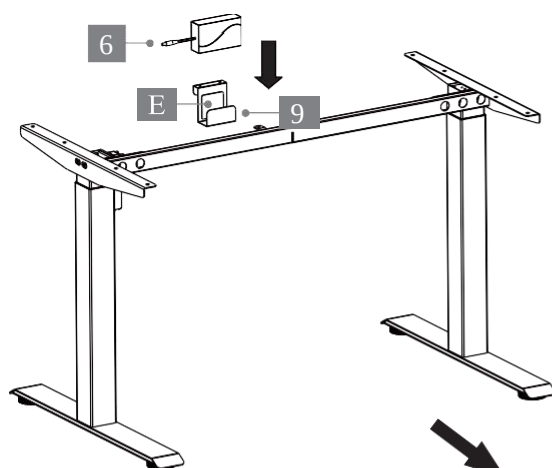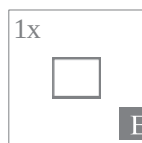   

5

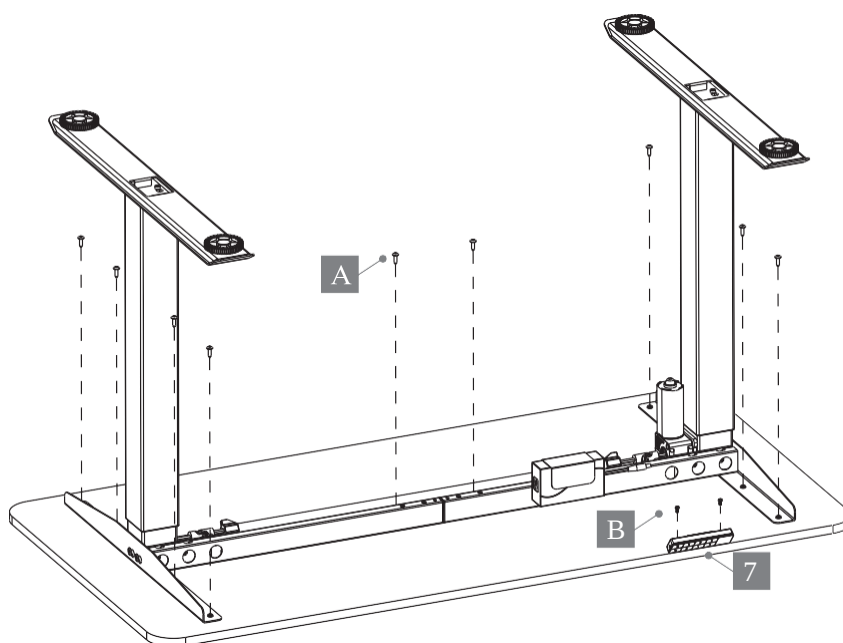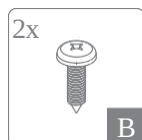  
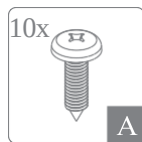 


6

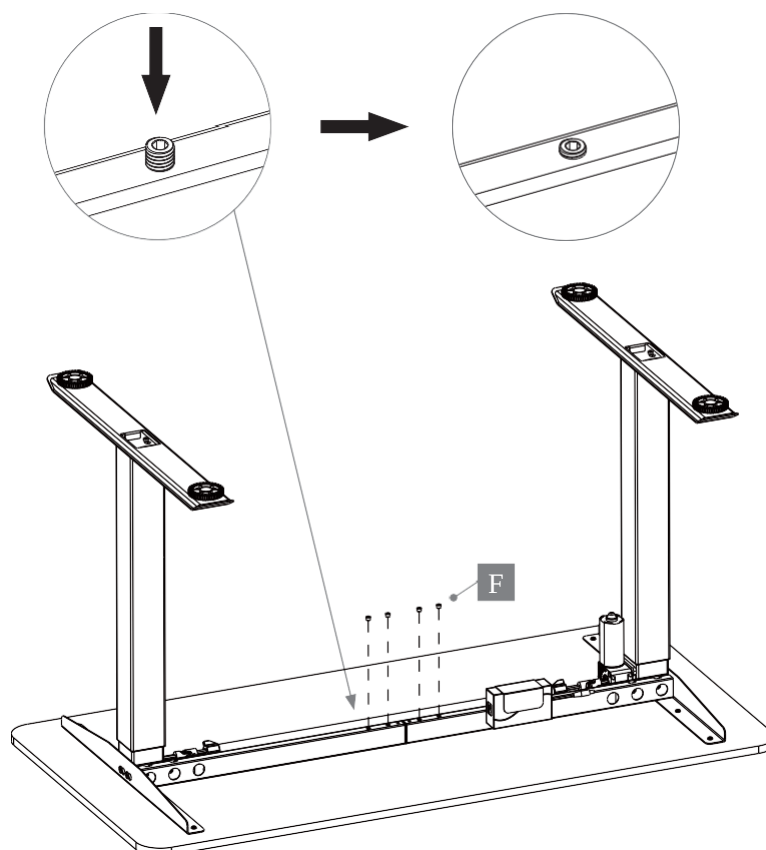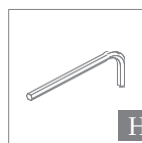  

7

  5x  
H

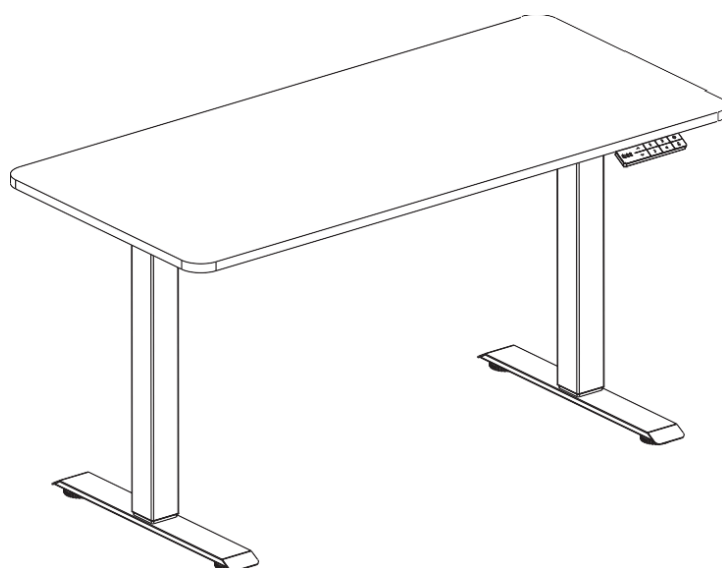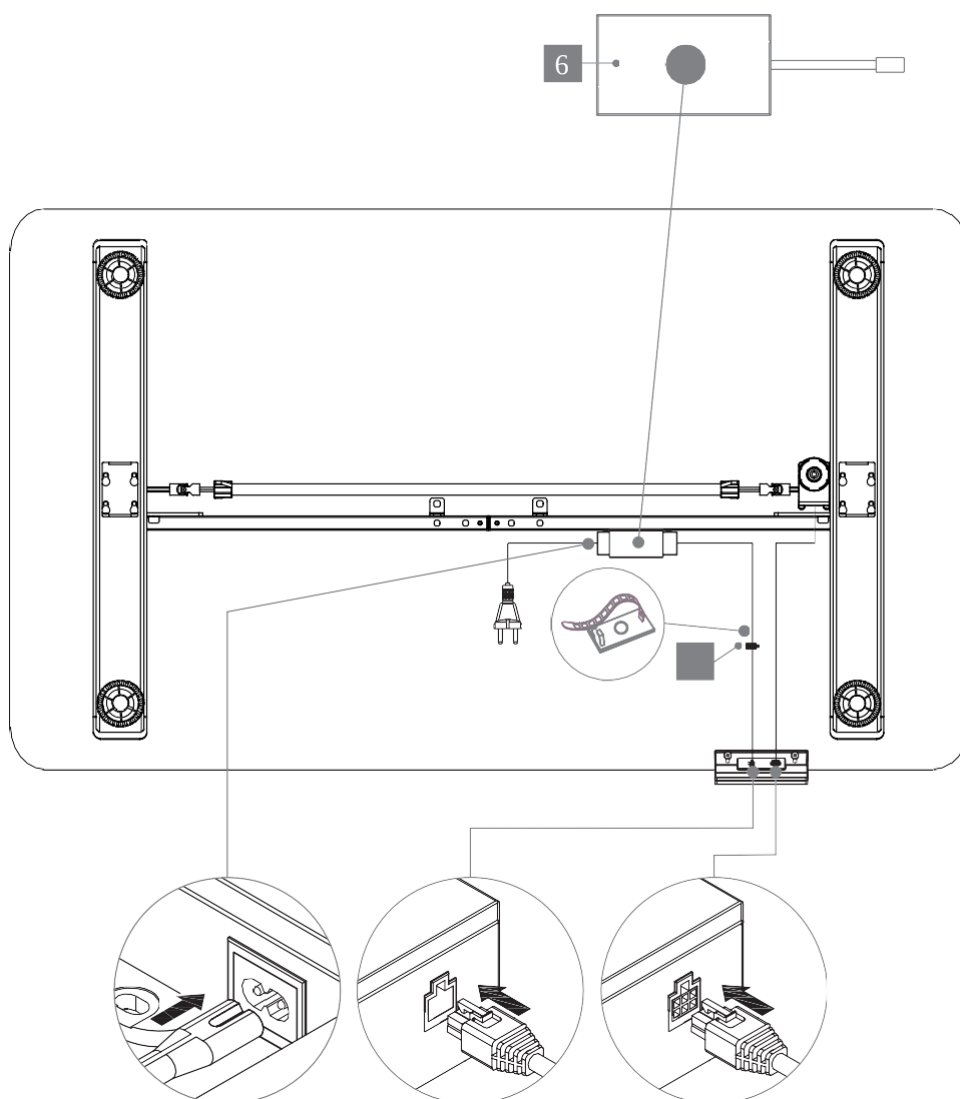

## SAFETY AND WARNING!

Before plugging the table into the outlet, make sure that the lift columns are level and set at the lowest position and all the screws are tightened, to avoid the desk making noise and wobbling.

This product can be used by children age 8 years and older, a person with reduced physical, sensory or mental capacity as long as they have been given proper instructions / training on how to use the product in a safe way and understand the hazards involved. Children shall not play with the product.

It is not recommended to set the operating mode of the table to "one touch", as this mode is not permitted in some countries. Please inform yourself before changing the settings.



## RESET BEFORE FIRST USE

To make the table ready for use:

1. Press the "Down" button until the table reaches the lowest position.
2. Press the "Down" button for at least 5 seconds until the table retracts and beeps.
3. The table is now ready for use

## OPERATION

| Settings           | Icon                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | Instructions                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|--------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Up & Down          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | To change the table height, press the „Up“ or „Down“ button. The button must remain pressed until the desired position is reached.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Menu               | <br>                                                                                                                                                                                                                                                                                                                                                                                                                                                     | Press and hold the „Menu“ button for 5 seconds to access the setting menu.<br>You can navigate through the different settings using the „Up“ or „Down“ button.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Height Memory      | <br><br> <br>                                                                                                                                                                                   | To set memory 1-4, press the „Menu“ button.<br>„S-“ appears on the display.<br>Then select the desired button (1-4) and confirm with the "Menu" button                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Child lock         |  <br><br>                                                                                                                                                                                                                                                                    | To activate the child lock, press the „Up“ and „Down“ button simultaneously for 5 seconds<br>"LOC" now appears on the display and the table is locked.<br>To unlock, press the „Up“ and „Down“ button simultaneously again for 5 seconds.<br>When „LOC“ disappears, the table is unlocked.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Height limit       | <br> <br><br> <br>  | To get into setting mode for min / max height you have to press the „Menu“ button for about 5 seconds.<br>After that the min height is displayed. You can change the min height by pressing the „Up“ and „Down“ button until the desired height is displayed.<br>After that you press the „Menu“ button again and the current max height is displayed.<br>You can change the max height by pressing the „Up“ and „Down“ button until the desired height is displayed.<br>Then you press the „Menu“ button for about 5 seconds and "SUS" is displayed indicating that the selected min and max heights have been saved.<br>Attention: if you want to set 75 as the minimum height, choose 73 as the height, because the default desktop thickness is 2 cm and it will be automatically added. In case you have changed the table top thickness, please add that value.<br>To change the settings back to the factory settings you have to do the same procedure again entering 68.0 cm + entered table top thickness (factory setting 2.0 cm) for the min setting and 118.0 cm + entered table top thickness (factory setting 2.0 cm) for the max setting. |
| Reminder           | <br>                                                                                                                                                                                                                                                                                                                                                                                                                                               | To set the "Reminder function", briefly press the "reminder" button.<br>You can navigate through the different intervals using the "Up" or "Down" button.<br>After 5 seconds, the setting is saved and you automatically return to the menu                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Reset              | <br>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | To perform a reset, press and hold the "Down" button until the frame has reached the lowest position and rebounds 0.5 cm.<br>"RST" appears on the display of the hand control. The reset process is now complete and the hand control beeps.<br>If an emergency occurs during the reset, release the "Down" button to stop the rack. the reset process will then be cancelled. Once the reset is complete, you must repeat the entire process until it is successful. Otherwise, you will not be able to carry out any further processes.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Energy saving mode |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | If no operation is performed within 1 minute, energy-saving mode is activated.<br>The handset display switches off and switches to energy-saving mode.<br>Energy-saving mode can be cancelled by pressing any button.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |

## FACTORY/DEFAULT SETTINGS

- Press and hold the "Menu" button for at least  5 seconds to access the settings menu.
- To navigate in the settings menu, use the "Menu" button .
- To change to the desired setting, use the „Up“ or „Down“ buttons.
- To save the setting you have made, press and hold the "Menu" button until **SuS** appears and the menu closes.

| Setting                                                                                                        | Icon         | Instructions                                                                                                                                                                                                                |
|----------------------------------------------------------------------------------------------------------------|--------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Minimum height                                                                                                 | <b>70.0</b>  | The adjustment value between the minimum and maximum height should be at least 10 cm.                                                                                                                                       |
| Maximum height                                                                                                 | <b>80.0</b>  |                                                                                                                                                                                                                             |
| Tabletop height                                                                                                | <b>02.0</b>  | For the actual height of the entire table, the thickness of the table top can be entered here (for example 02.0 cm).                                                                                                        |
| Collision protection<br>Up    | <b>PC3</b>   | Select the setting for the collision protection  (PC0 - PC5) and set the desired level (0 = Off, 1 = least sensitive, 5 = most sensitive). |
| Collision protection<br>Down  | <b>DC3</b>   | Select the setting for the collision protection  (DC0 - DC5) and set the desired level (0 = Off, 1 = least sensitive, 5 = most sensitive). |
| Tilt sensor lengthwise                                                                                         | <b>PA3</b>   | Select the setting for the tilt sensor (PA0 - PA5) and set the desired level (0 = off, 1 = least sensitive, 5 = most sensitive).                                                                                            |
| Tilt sensor crosswise                                                                                          | <b>DA3</b>   | Select the setting for the tilt sensor (DA0 - DA5) and set the desired level (0 = off, 1 = least sensitive, 5 = most sensitive).                                                                                            |
| Unit                                                                                                           | <b>U - 0</b> | Select the setting for the unit of measurement and set the desired unit of measurement. (0 = cm/1 = inch).                                                                                                                  |
|                                                                                                                | <b>U - 1</b> |                                                                                                                                                                                                                             |
| Duty cycle                                                                                                     | <b>A - 0</b> | Select the "Operating mode" symbol in the default settings and select a mode (0 = constant touch/1 = one touch) <sup>1</sup>                                                                                                |
|                                                                                                                | <b>A - 1</b> |                                                                                                                                                                                                                             |

## TROUBLESHOOTING

| Error Code            | Possible Cause              | How to Correct                                               |
|-----------------------|-----------------------------|--------------------------------------------------------------|
| E1, E6, E7            | Power failure               | Reconnect power - switch power source                        |
| E2                    | Lifting columns out of sync | Perform a reset as described under „Reset before first use“  |
| E3, E4                | Handset fault               | Unplug and plug in the cable of the handset                  |
| E8                    | Desktop not level           | Level the table                                              |
| E11, E21              | Motor fault                 | Check the motor wire connections                             |
| E12, E22              | Control box failure         | Control box needs to be replaced                             |
| E13, E23              | Connection problem          | Check cables                                                 |
| E14 - E17   E24 - E27 | Motor failure               | Motor / lifting column needs to be replaced                  |
| E18, E28              | Overload protection         | Reduce the weight                                            |
| E36                   | Motor blocked               | Perform a reset as described under „Reset before first use“  |
| E40, E41              | Series signal error         | Check cables or the control box needs to be replaced         |
| E42                   | EEPROM error                | Control box needs to be replaced                             |
| E43                   | Gyro-sensor error           | Control box needs to be replaced                             |
| HOT                   | Excessive use               | Do not use for 20 minutes. System will recover automatically |

## CORRECT DISPOSAL



The symbol of the crossed-out dustbin indicates that this electrical or electronic equipment must not be disposed of with household waste at the end of its service life, but must be taken for separate collection by the end user. Free collection points for old electrical equipment are available in your area for the return of the equipment, as well as other acceptance points for the reuse of the equipment, if applicable. You can obtain the addresses from your city or local government. Also distributors with a sales area for electrical and electronic equipment of at least 400 square meters and distributors of food with a total sales area of at least 800 square meters, which offer several times in the calendar year or permanently electrical and electronic equipment and make it available on the market, are obliged to take back free of charge old electrical and electronic equipment. When supplying a new EEE to an end user, they must take back free of charge an old EEE of the end user of the same type that fulfills essentially the same functions as the new EEE, at the place of supply or in the immediate vicinity thereof, and, without purchasing an EEE, take back free of charge at the end user's request up to three old EEEs per type that do not exceed 25 centimeters in any external dimension, in the retail store or in the immediate vicinity thereof. If the old electrical or electronic equipment contains personal data, you are responsible for deleting this data before returning it. If this is possible without destroying the old electrical or electronic equipment, please remove old batteries or rechargeable batteries as well as old lamps from it before returning it for disposal and take them to a separate collection. For more information on the Electrical and Electronic Equipment Act, please visit [www.elektrogesetz.de](http://www.elektrogesetz.de). (EEE Reg. No. DE: 52242201)

